

예술극장 극장1 조명 회로도(CIRCUIT)

DMX

DIMMER

POSITION

서 측 [장치반입구]

그 리 드 [장치반입구]

동 측 [장치반입구]

1	2	3	4	5	6
7	8	9	10	11	12
401	402	403	404		
13	14	15	16	17	18
19	20	21	22	23	24
405	406	407	408		
25	26	27	28	29	30
31	32	33	34	35	36
409	410	411	412		
37	38	39	40	41	42
43	44	45	46	47	48
413	414	415	416		

289	290	291	292	293	294
				383	384
295	296	297	298	299	300
				385	386
301	302	303	304	305	306
				387	388
307	308	309	310	311	312
				389	390

145	146	147	148	149	150
151	152	153	154	155	156
449	450	451	452		
157	158	159	160	161	162
163	164	165	166	167	168
453	454	455	456		
169	170	171	172	173	174
175	176	177	178	179	180
457	458	459	460		
181	182	183	184	185	186
187	188	189	190	191	192
461	462	463	464		

49	50	51	52	53	54
55	56	57	58	59	60
417	418	419	420		
61	62	63	64	65	66
67	68	69	70	71	72
421	422	423	424		
73	74	75	76	77	78
79	80	81	82	83	84
425	426	427	428		
85	86	87	88	89	90
91	92	93	94	95	96
429	430	431	432		

343	347				
344	348				
345	349				
346	350				
25	26				
313	314	315	316	317	318
				391	392
319	320	321	322	323	324
				393	394

193	194	195	196	197	198
199	200	201	202	203	204
465	466	467	468		
205	206	207	208	209	210
211	212	213	214	215	216
469	470	471	472		
217	218	219	220	221	222
223	224	225	226	227	228
473	474	475	476		
229	230	231	232	233	234
235	236	237	238	239	240
477	478	479	480		

97	98	99	100	101	102
103	104	105	106	107	108
433	434	435	436		
109	110	111	112	113	114
115	116	117	118	119	120
437	438	439	440		
121	122	123	124	125	126
127	128	129	130	131	132
441	442	443	444		
133	134	135	136	137	138
139	140	141	142	143	144
445	446	447	448		

325	326	327	328	329	330
				395	396
331	332	333	334	335	336
				397	398
337	338	339	340	341	342
				399	400

241	242	243	244	245	246
247	248	249	250	251	252
481	482	483	484		
253	254	255	256	257	258
259	260	261	262	263	264
485	486	487	488		
265	266	267	268	269	270
271	272	273	274	275	276
489	490	491	492		
277	278	279	280	281	282
283	284	285	286	287	288
493	494	495	496		

빅 도 어